

Centered Mouse
ROLLERMOUSE MOBILE

Good Ergonomics – Wireless

 


What's in the Box?

1. RollerMouse mobile
2. Travel wrap
3. Rubber feet
4. Dongle
5. USB extender
6. USB charging cable



User guide

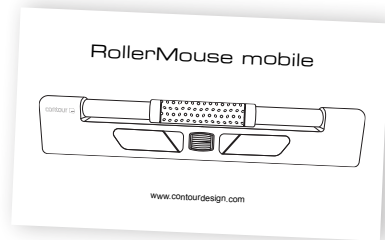

Quick Start

1. Connect via Bluetooth:

Power on RollerMouse mobile (button A). On your computer, navigate to the area of settings regarding Bluetooth connections. Select the option to add or discover a Bluetooth device. Your RollerMouse mobile should automatically be recognized, select it for the computer to start Bluetooth connection.

2. Connect via USB dongle:

Insert USB dongle into the available USB port and power on your RollerMouse mobile. Your computer will recognize the new device and connect automatically.

3. Connect via a wired USB connection:

Connect the USB cable to your RollerMouse mobile and into an available USB port on your computer. Power on your RollerMouse mobile. Your computer will recognize the new device and connect automatically.

 
Functions

- A. On/Off switch
- B. Cursor speed/Settings
- C. Left-click
- D. Right-click
- E. Copy
- F. Paste
- G. Scroll wheel
- H. Rollerbar



Charging / Extension

To charge your RollerMouse remove the USB extender and dongle from the charging cable. Plug the USB-C end into the RollerMouse. Your RollerMouse will charge in 4 hours. You may continue to use your RollerMouse as it charges. We recommend charging your RollerMouse once a month based on average daily office use.

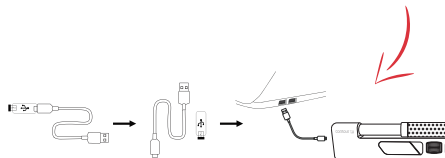

Battery

 


- Battery level is shown when the device is powered on or plugged in.
- If battery level is below 20%, a single light will flash to indicate the need to charge the device.

Cursor Speed (DPI)



- The cursor speed button is multifunctional: On its own, it controls cursor speed. Used in a sequence with other buttons, it adjusts device settings.



Wireless Connection

Once powered on, the device is in automatic mode which will pair to the first available connection. The device will attempt to connect to the dongle first. If no connection is made, the device will attempt to connect via Bluetooth using the pairing information that is already in the unit. If no pairing information is available, it will start Bluetooth pairing mode and remain in that pairing mode for about two minutes.

If the device is left in automatic pairing mode, RollerMouse mobile will cycle through the above steps each time it's powered off then powered back on again. When the device is plugged in through the USB cable, this connection overrides wireless connectivity.



Pairing and Secondary Options

 
1. **Restart Bluetooth pairing:** Press button **B**. While continuing to hold **B**, press and release button **C** two times, then release button **B**.
2. **Select Bluetooth-only connectivity:** Press button **B**. While continuing to hold **B**, press and release button **C** three times, then release button **B**.
3. **Select dongle-only connectivity:** Press button **B**, while continuing to hold **B**, press and release button **D** three times, then release button **B**.
4. **Restore pairing with dongle:** Unplug then re-plug the dongle to the unit to enable pairing. Hold the device close to dongle and press button **B**. While continuing to hold **B**, press and release button **D** two times, then release button **B**.
5. **Reset wireless function to automatic pairing mode:** Press button **B**. While continuing to hold **B**, Press and release button **C**, then release button **B**.

Rollerbar click function


Click force refers to the level of resistance when clicking the Rollerbar. To adjust click force, press and hold button **B** then press and release button **H**. Move button **G** up and down to adjust the click force settings. The current click force level will be displayed by the LEDs on the right side of the unit. To disable the Rollerbar click, adjust the click tension until all LEDs are illuminated.

Rollerbar click sound

Hold button **B**. While continuing to hold **B**, press and release button **G**, then roll **G** to enable or disable click sound. LED lights will indicate the setting was successfully activated.

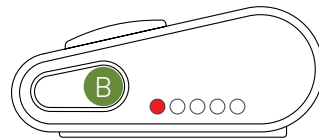

Disable

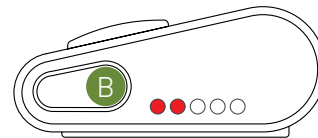 

Enable

RollerMouse mobile accessories

Rubber Feet: Your RollerMouse mobile device comes with 2 sets of rubber feet which can be optionally adhered to the bottom of your keyboard. You will find each set gives a slightly different height option for your keyboard. For optimal positioning, your space bar should be slightly higher than the Rollerbar of your device. Please use the set of adhesive rubber feet that is most comfortable for use with your RollerMouse mobile.



Travel Wrap: This accessory is to be used during travel to protect your device from dust and debris. While attached to the RollerMouse mobile, the Wrap can also be folded in half and used as a wrist rest while operating your device. Another option for this is to fold it in half and put it under the front edge of your laptop to lift the height of your keypad.



**Contour Design, Inc.**

10 Industrial Drive
Windham, New Hampshire 03087, USA
Phone: (603) 893-4556
Email: ergoinfo@contourdesign.com

Contour Design Nordic A/S

Borupvang 5B, St.
DK-2750 Ballerup / Denmark
Phone: +45 70 27 02 27
Email: info@contour-design.com

For more information please visit:

www.contourdesign.com

Tested to comply with FCC
and IC standards.



Svanemærket tryksag
5041 0826 LaserTryk.dk

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

1. This device may not cause interference; and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications.

Warranty

If there is a functional defect due to faulty manufacturing, we will replace the product. This warranty does not cover damage that results from misuse of the product.

Attention!

If you attempt to dismantle your "RollerMouse mobile" you will invalidate your warranty.